JUN 2 3 2011

INSTALLATION INSTRUCTION FOR 1811-66/1811-84

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER

PREPARATION

- 1. Shut off power at the fuse box or circuit breaker box. If necessary, remove old fixture and all mounting hardware from wall junction box
- 2. Carefully unpack your new fixture and less out all the parts on a clear area. Take care not to loose any small parts necessary for installation.
- ASSEMBLING THE FIXTURE Thread the pipe (F) onto nipple (E), pipe (H) onto nipple (G), pipe (J) onto nipple (I), pipe (L) onto nipple (K), pipe (M) onto nipple (N).
 Slide the glass (P) over the socket (O) and secure
- with the retaining ring (Q).
 MOUNTING THE FIXTURE (Fig. 1)
- 5. Insert outlet box screws (B) into the back plate (A); secure back plate (A) with outlet box screws

CONNECTING THE WIRES (Fig. 2)


- 6. Connect the fixture wires to the junction to x wires as shown in Fig. 2. Make sure all wire corprectors are secure and do not easily pull off with a slight tug. If there is no Green Ground Wire from the Junction box, connect the Fixture Ground Wire to the Circular Strap or the Mounting bar with the Green Screw provided.
- 7. Tuck these wire connections neatly into the ceiling junction box.
- Raise the canopy (D) over the back plate (A), and then secure it with nut (C) by wrench.

COMPLETING THE INSTALLATION

Install the proper light bulbs for your fixture

DO NOT EXCEED THE SPECIFIED WATTAGE!

Return the power to the junction box and teletithe fixture. Your installation is now complete.

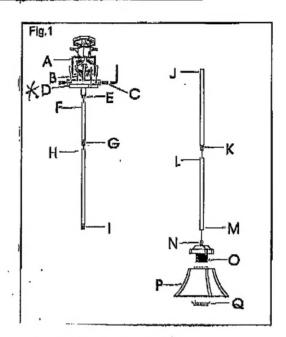

0.101817 WERMON